

Wall Hung Toilet

Set-Out Details

P-Trap : 185mm - Roughing-in from bottom of pan

4 Star - Wels 3.5 Litres Average

Vitreous China for added hygiene

Brackets and Fixings included

Thick flat UF - Quality soft close seat with stainless steel hinges

This toilet has been built from the best available materials and has been manufactured to the highest Australian & overseas standards.

The toilet is guaranteed by the manufacturer for 1 year parts and labour and 15 years parts only. Failure to comply to these Installation Instructions will void this warranty.

11 21411 R
Rimless Wall Hung Pan

IMPORTANT

This product must be installed by a licensed plumber in order for its optimal operation and for coverage of manufacturer's warranty

All dimensions are in millimetres and are subject to normal manufacturing variations.

Paco Jaanson reserves the right to vary the specifications at any time without notice.

365mm (w) x 580mm (d) x 365mm (h)

General Information

This next generation of rimless wall hung toilet pan is eco friendly (4.5L/3L) and comes equipped with a U.F. Soft Close Seat as standard. Its simplicity of form and rimless flushing system makes it the perfect choice for any bathroom.

Maintenance

Should service be required on your toilet pan, please contact your distributor.



Cleaning Suggestions

Use only clean soap and water with a soft sponge or cloth. **DO NOT USE ANY DETERGENTS OR CREAM CLEANERS.**


Fixing Kit includes:




1. Measure set-out.
Mark & drill holes accordingly.

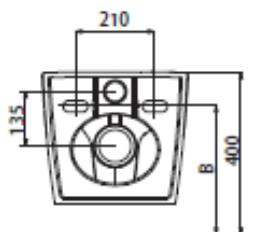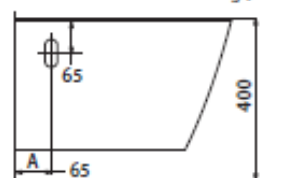

(Supplied separately with In-Wall Cistern).

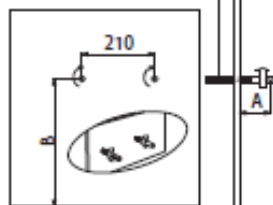


2. Install the pan onto the Mounting Sleeves and hold into position.

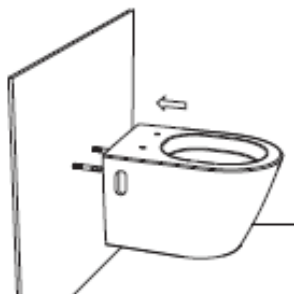

3. Firmly tighten the Fixing Sleeve all the way into the Fixing Bush inside of pan.



4. Insert Allen Key Into Grub Screw & place through side hole in pan. Turn clockwise. (6Nm Max. Torque).

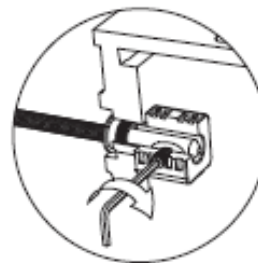

PACO JAANSON FINE BATHROOMS
Telephone : 1800 006 260
www.pacojaanson.com.au

C.1
InChange0P/102022



Back To Wall Floor Pan

Set-Out Details

S-Trap : 110-145mm Adjustable with V-070 Connector

P-Trap : 185mm

Fixings / Brackets - Floor fixing kit included

Thick flat UF - Quality soft close seat with stainless steel hinges

This toilet has been built from the best available materials and has been manufactured to the highest Australian & overseas standards.

The toilet is guaranteed by the manufacturer for 1 year parts and labour and 15 years parts only. Failure to comply to these Installation Instructions will void this warranty.

112141D R
Rimless Floor Pan

Plumbers' Installation Instructions

'S'- TRAP CONNECTOR FIXING PROCEDURE

Vario-bend S-Trap : 110-145mm Adjustable with V-070 Connector

1. Mark centre line of the pan on finished wall which is to be used as a guide when connecting the pan, as detailed in Step 2.
2. Determine set-out "A" of existing pan connector, as detailed in Step 2. Set-out range 110-145mm.
3. Determine and mark the cutting length of the threaded spigot by measuring out the set-out dimension "A" from the centre reference mark on the Vario-bend. Cut threaded spigot to size, as detailed in Step 2.
4. Fit Vario-bend to pan connector and determine cutting length of connection end to provide standard seal and centre height of 180mm. Remove and cut to length as detailed in Step 2.
5. Position fixing nut onto threaded spigot and refit Vario-bend into pan connector. Mark top three centre hole positions of the fixing nut on the finished wall.
6. Cut pan connection end at the front of the serration which is nearest to the mark. Remove any rough edges and chamfer with fine file.
7. Position rubber seal over the front of the Vario-bend and secure with fixing ring. Ensure tightness of fixing ring.
8. Screw fixing nut on to threaded spigot end. Refit Vario-bend into pan collar and secure fixing nut to wall with screws. Lubricate rubber seal with soap solution to aid with pan outlet connection.

PAN FIXING PROCEDURE

Pan positioning and preparation:

1. Position and push pan into connector using the marked centre line of the foot of the pan (previously marked on wall).
2. Locate the cistern on the pan and check that the cistern is level (side to side) and aligned with the tiling edges. Adjust pan position if necessary.

Floor Bracket fixing:

1. Position and push into connector using the marked centre line on the wall as a guide and locate the cistern onto the pan, checking that the cistern aligns with the finished wall. Adjust pan position if necessary. Remove the cistern and pan.
2. Locate the Concealed Fixing brackets into position on centre line of pan 120mm from the finished wall and mark bracket fixing hole centres on finished floor.
3. Drill two holes in the marked positions on the floor. The hole diameter is dependent on the type of fixing system and floor finish. Secure brackets to finished floor.
4. Ensure that the area around the floor is clean and free from building material.
5. Run a bead of acetic cured silicone sealant at a height of 8mm approximately fully around the foot of the pan which contacts the floor. Use wedges around the foot base (if required) so that the maximum height of silicone sealant is not greater than 5mm on completion on bedding.
6. Connect pan to connector and locate plastic fixing sleeve and brass bush into holes in the pan. Fit screw into the bracket and tighten pan to floor while ensuring level, as detailed in Step 2.

IMPORTANT- DO NOT OVER TIGHTEN, AS THIS MAY CRACK THE PAN FOOT. Snap on plastic cap.

7. Provide support under the pan foot so that it is maintained in the levelled position while the silicone sealant sets.

Remove any excess sealant to provide a neat joint between the pan and the floor.

Allow at least 24 hours for the bedding sealant to set before use.



PACO JAANSON FINE BATHROOMS

Telephone : 1800 006 260

www.pacojaanson.com.au

C.2

incchang@PJ1102026